

## HOW TO CONNECT AN INDUCTION DECODER TO A COMPUTER





### HOW TO CONNECT AN INDUCTION DECODER TO A COMPUTER

# INSTALLATION **INDUCTION DECODER LOOP WIRE RG 223 COAXIAL CABLE RJ45 CABLE** MAX 100 m • 328 ft **470 OHMS RESISTANCE TIMING SOFTWARE** HL18D **PASSIVE LOOP CONNECTION BOX POWER SUPPLY WIRED SPEAKERS MANUAL CONTACTOR**



### **HOW TO CONNECT AN INDUCTION DECODER TO A COMPUTER**

#### IMPORTANT

TO COMMUNICATE WITH THE DECODER, THE CONNECTED COMPUTER MUST HAVE A FIXED IP ADDRESS

LIKE ANY DECODERS
THE DEFAULT IP ADDRESS IS


192.168.000.010

AND THE DEFAULT LOCAL PORT AND REMOTE PORT

2008

#### WINDOWS SETTINGS

Go to the Windows Explorer of your computer, rightclick on the **NETWORK** folder, then choose the **PROPERTIES** tab.

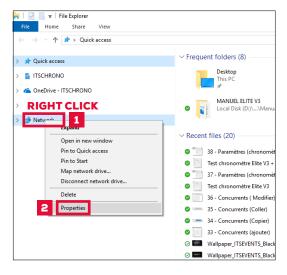


Select **CHANGE ADAPTER SETTINGS** then double-click on **ETHERNET.** 





From the open tab Ethernet Properties

Select PROTOCOLE INTERNET VERSION 4 (TCP/IPV4) then PROPERTIES.

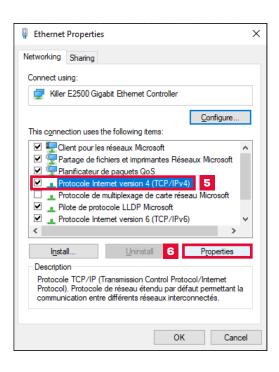






### HOW TO CONNECT AN INDUCTION DECODER TO A COMPUTER


### IMPORTANT THE IP ADDRESS OF THE COMPUTER MUST BE IDENTICAL TO THAT OF THE DECODER FOR THE FIRST 3 GROUPS OF NUMBERS 192.168.000 ONLY THE LAST GROUP OF NUMBERS. MUST BE DIFFERENT (10 FOR THE DECODER AND 9 FOR THE COMPUTER FOR EXAMPLE) THE SUBNET MASK MUST BE 255.255.255.0 AND THE DEFAULT GATEWAY IS NOT REQUIRED Protocole Internet version 4 (TCP/IPv4) Properties You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings. Obtain an IP address automatically Use the following IP address: IP address: 192 . 168 . 0 . 9 Subnet mask: 255 . 255 . 255 . 0 192 . 168 . 0 . 254 Default gateway: Obtain DNS server address automatically Use the following DNS server addresses: Preferred DNS server: Alternative DNS server: Validate settings upon exit THE COMPUTER IS NOW READY TO COMMUNICATE WITH THE DECODER

#### **CONNECTION TEST COMPUTER / DECODER**

Activate a stopwatch in Elite V3 and set it up, then turn on the **TEST** button. Then, a frame must go up in the **DATA RECEIVED** block.


### ONCE THE TEST IS DONE DON'T FORGET TO CLICK ON THE CANCEL BUTTON BEFORE CLOSING THIS WINDOW VIA THE OK BUTTON.

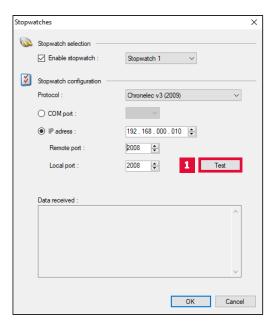

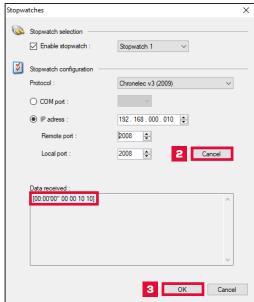

#### IF THE CONNECTION DOESN'T WORK

CHECK YOUR WIRING. DISABLE WINDOWS FIREWALL AND ANTIVIRUS THROUGH THE WINDOWS DEFENDER SETTINGS.

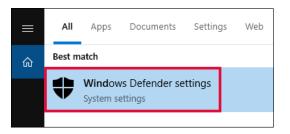





23, rue du Comté de Montbéliard 25660 MONTFAUCON - FRANCE

contact@itschrono.com

+33 (0)3 81 57 52 09

www.itschrono.com

MADE IN FRANCE