



# ITS CHRONO TIMING DEVICES

## HOW TO CONNECT A COMPUTER TO A ITS CHRONO TIMING DEVICE

### IMPORTANT

TO COMMUNICATE WITH AN ITS CHRONO TIMING DEVICE, THE CONNECTED PC MUST HAVE A FIXED IP ADDRESS

THE DEFAULT IP ADDRESS OF ALL ITS CHRONO TIMING DEVICES IS

**192.168.000.101**


AND THE DEFAULT LOCAL PORT AND REMOTE PORT

**2101**

### WARNING

THE WINDOWS SETTINGS BELOW ONLY WORK IF YOU ARE ON A SINGLE LOCAL NETWORK WITHOUT A ROUTER.

IF YOUR COMPUTER IS ON A LOCAL NETWORK WITH A ROUTER, YOU'LL NEED TO CHANGE YOUR DEVICE'S IP ADDRESS.

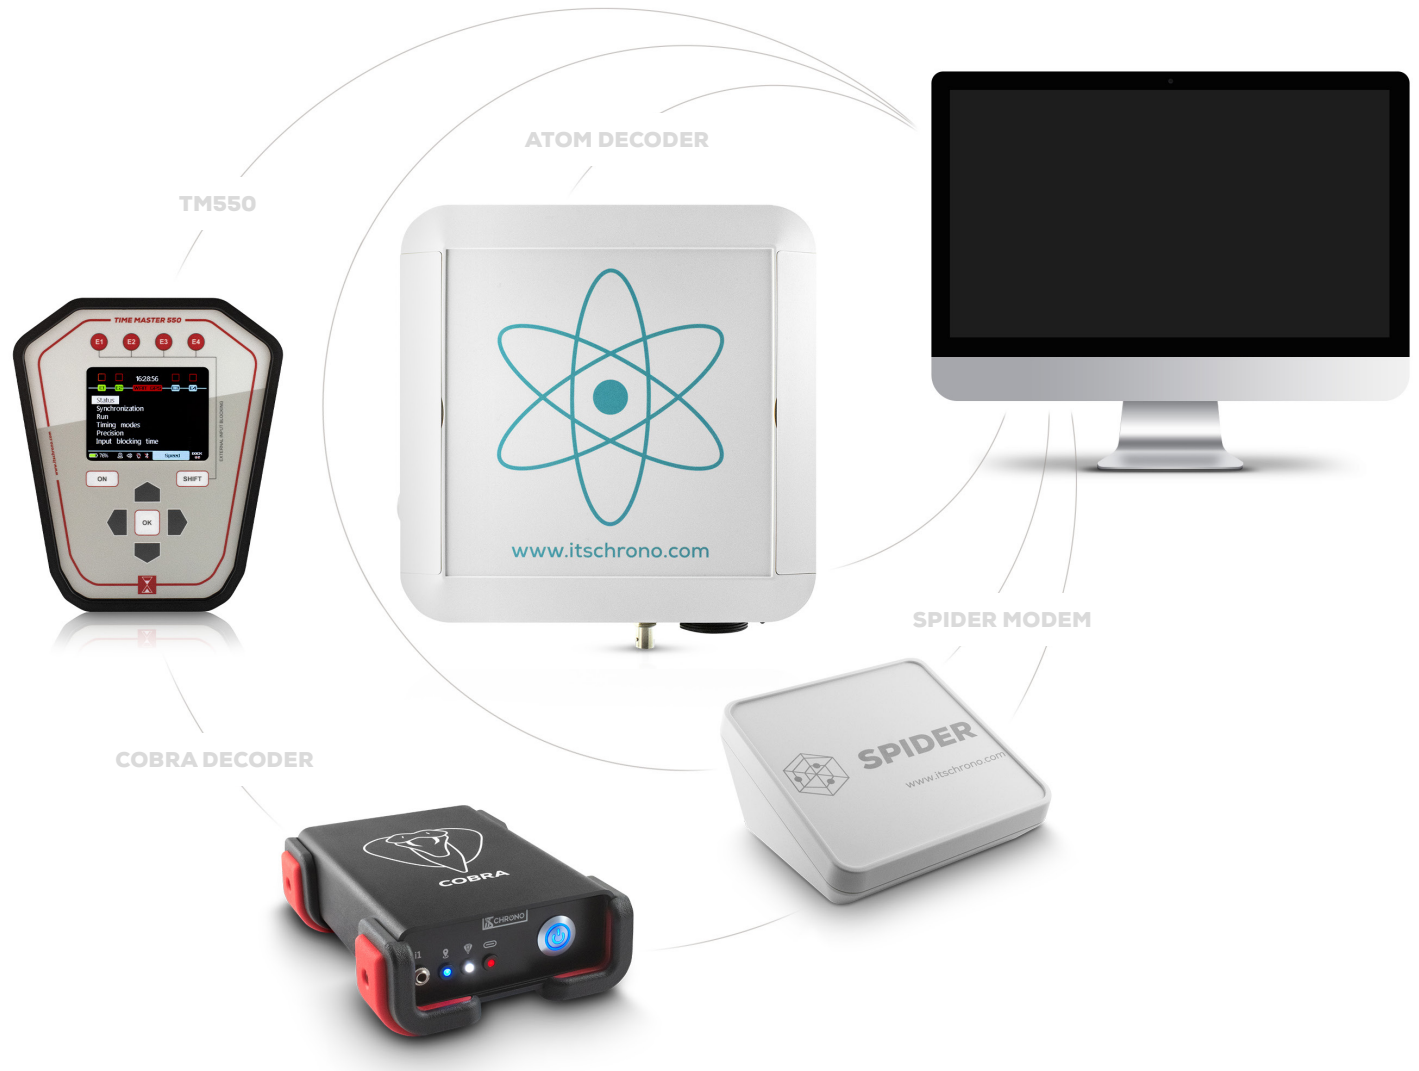



# ITS CHRONO TIMING DEVICES

## HOW TO CONNECT A COMPUTER TO A ITS CHRONO TIMING DEVICE


### IMPORTANT

THE IP ADDRESS OF THE COMPUTER MUST BE IDENTICAL TO THAT OF THE DEVICE FOR THE FIRST 3 GROUPS OF NUMBERS : **192.168.000**

ONLY THE LAST GROUP OF NUMBERS MUST BE DIFFERENT (10 FOR THE DEVICE AND 9 FOR THE COMPUTER FOR EXAMPLE)

THE SUBNET MASK MUST BE **255.255.255.0**


AND THE DEFAULT GATEWAY **IS NOT REQUIRED**

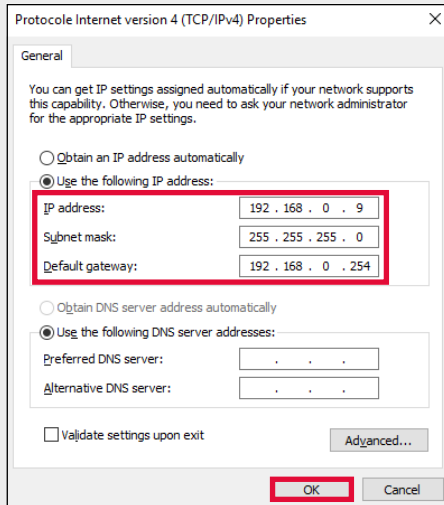



**THE COMPUTER IS NOW READY TO COMMUNICATE WITH THE DEVICE**

### WINDOWS SETTINGS


Go to the Windows Explorer of your computer, right-click on the **NETWORK** folder, then choose the **PROPERTIES** tab.

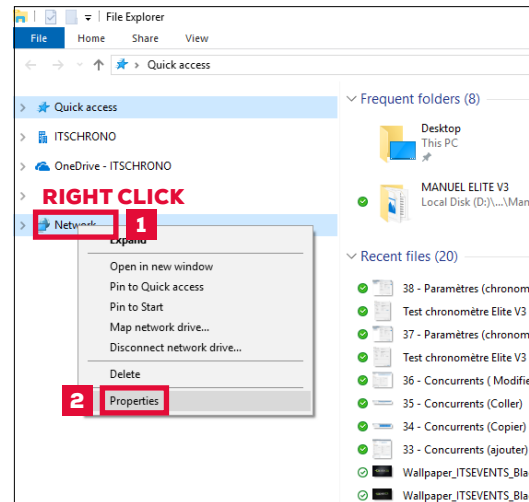

Select **CHANGE ADAPTER SETTINGS** then double-click on **ETHERNET**.

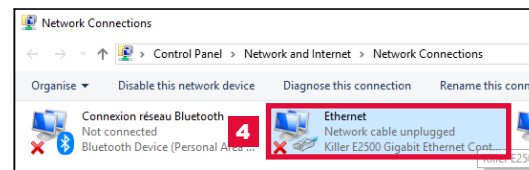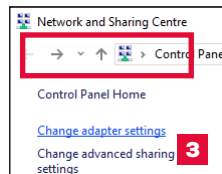


From the open tab Ethernet Properties : Select **PROTOCOLE INTERNET VERSION 4 (TCP/IPv4)** then **OK**.

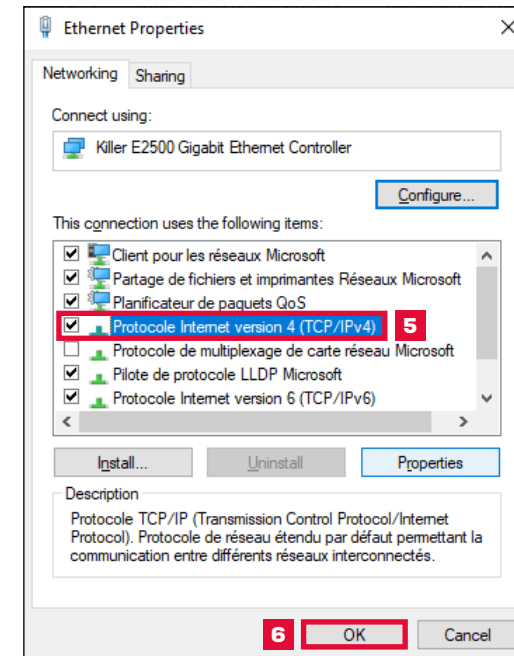

### IF THE CONNECTION DOESN'T WORK

**CHECK YOUR WIRING. DISABLE WINDOWS FIREWALL AND ANTIVIRUS THROUGH THE WINDOWS DEFENDER SETTINGS.**

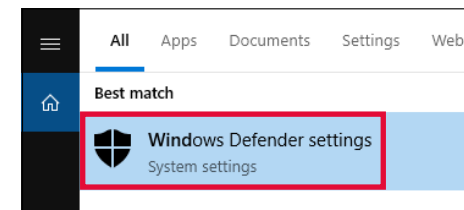



23, rue du Comté de Montbéliard  
25660 MONTFAUCON - FRANCE

**[contact@itschrono.com](mailto:contact@itschrono.com)**

**+33 (0)3 81 57 52 09**

**[www.itschrono.com](http://www.itschrono.com)**

**MADE IN FRANCE**