



ATOM SYSTEM • TRANSPONDER

HOW TO PROGRAM A TRANSPONDER

REF. ITSATOMT



Loop configuration is performed via the decoder, which communicates with the loop(s) via radio.

1 • CONNECTING THE DECODER TO THE PC

Connect

192.168.0.101 2101



Acknowledgement • Decoder connected to PC

Clear text Decoder status

[00h23'06" 07 08 00 00]

[00h23'06" 07 08 00 00]

2 • START DECODER AND LOOP

Click on the **START** button.
The decoder emits a beep when started.

GMT + : 1

Start Start w GPS Stop

Does not stop the loop,
only the decoder

Clear text Order confirmation

Loop: Started | SN: 001 | Mode: Race | ID: 10 | Power: 80

START
Loop: Started | SN: 001 | Mode: Race | ID: 10 | Power: 80

START → DECODER STARTED
LOOP: STARTED → LOOP STARTED

YOU CAN LEAVE THE DECODER IN «START» MODE
TO CHECK THAT THE TRANSPONDERS ARE
CORRECTLY PROGRAMMED.

3 • TRANSPONDER PROGRAMMING MODE

The loop ID automatically becomes N°15.

Atom Active Loop

☐ Race Mode (ID: 1 to 14) ☒ Transponder Programming (ID: 15)

Config Loop ID 15 POWER (0-100) 30

Click on **CONFIG LOOP** to switch the loop to ID 15 programming mode.

Clear text Order confirmation

Loop: Started | SN: 001 | Mode: Prog | ID: 15 | Power: 30

START
Loop: Started | SN: 001 | Mode: Race | ID: 10 | Power: 30
Loop: Started | SN: 001 | Mode: Prog | ID: 15 | Power: 30

4 • CHANGE THE TRANSPONDER ID

Place and leave the transponder over the loop.
The transponder LED will flash rapidly.

Click on the **PROG TRANSPONDER** button.
The transponder LED goes out.

Atom Transponder

Activate Loop Disable Loop

Prog Transponder 1100

The decoder emits a beep.
The loop starts and then stops.

Clear text Order confirmation

Loop: Stopped | SN: 001 | Mode: Prog | ID: 15 | Power: 30

Loop: Started | SN: 001 | Mode: Prog | ID: 15 | Power: 30
Loop: Stopped | SN: 001 | Mode: Prog | ID: 15 | Power: 30

The transponder number is changed.

Clear text Decoder frame

L01: B13 001100 00:03'24"720 99 01 2 1490

L01: B13 001100 00:03'24"720 99 01 2 1490

PRESS «ACTIVATE LOOP», THEN REPEAT
THE PROCEDURE FROM STEP 4.

WARNING

DON'T FORGET TO RETURN TO **RACE** MODE,
ENTER THE CORRECT LOOP ID BETWEEN 1 AND 14,
THEN CLICK ON THE **CONFIG LOOP** BUTTON
ONCE TRANSPONDER CONFIGURATION IS COMPLETE.

☒ Race Mode (ID: 1 to 14) ☐ Transponder Programming (ID: 15)

